

SnowDogg® Snowplow Headlight Adapter

INSTALLATION INSTRUCTIONS



16071160

HB3/HB11 - GM 2007+; TOYOTA TUNDRA 2007+

INSTRUCTIONS

1. Disconnect both PS and DS side truck headlights from the truck harness.
2. Connect the 16071160 adapters to the OEM headlight connectors and truck harness connectors.
3. Connect the 16071160 adapters to the universal light harness connectors included with the snowplow. This is part of the harness with the relay module.
4. Use an included Tap connector to tap the BROWN wire into your PARK light circuit on both the PS and DS circuits.
5. Use an included Tap connector to tap the PURPLE or ORANGE wire into the TURN light circuit on both the PS and DS circuits.
6. Check all light functionality before operating the plow.

Note:
Due To Manufacturing Variations Between Trucks, The Polarity May Need To Be Reversed On The Harness Side Of The Headlight Adapter. Swap The A+B Pins As Shown Below On Both Of The Long Black Connectors.

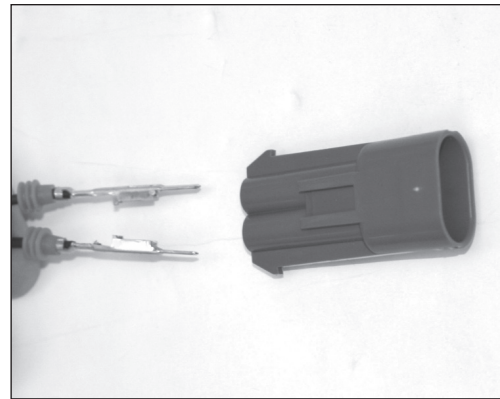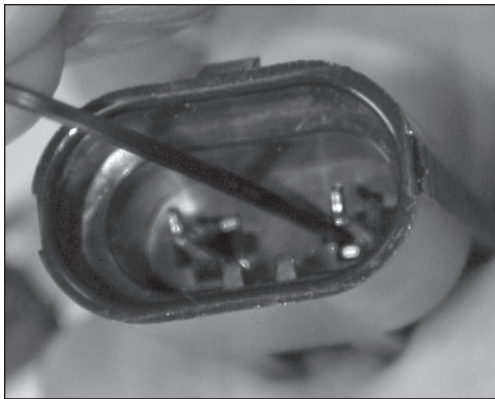

Contact SnowDogg Tech Support At 866-974-3644 With Questions.